

How to set DGstation Universal RCU

Only the RCU of CubeCafe-prime, CubeRevo-mini and CubeRevo can be compatible with the other DGstation models.

If you press “OK” and one of the below buttons of RCU for about 10 sec. at the same time, “STB” button of RCU will blink for setting completion.

The RCU of CubeCafe–prime works as below

OK+1 : CubeCafe 400S and CubeCafe 250S

OK+3 : CubeCafe -prime

OK+4 : CubeCafe 200s

The RCU of CubeRevo and CUbeRevo -mini works as below

OK+1 : CubeCafe 400S and CubeCafe 250S

OK+2 : CubeRevo

OK+3 : CubeCafe -prime

OK+4 : CubeCafe 200s

OK+5 : CubeRevo -mini

